


User Manual

Thank you for choosing our electronic kitchen scale. To ensure proper operation and to maintain the lifespan and the utmost accuracy of the scale, please read these instructions carefully before use.

1. Key features

- Capacity: 5kg/5000mls/11lbs/176.4fl.oz
- Graduation: 1g/1ml/0.1oz/0.1fl.oz
- Minimum weight: 2g
- Timer function
- Tare function/add & weigh
- 3xAAA batteries included

2. LCD Display

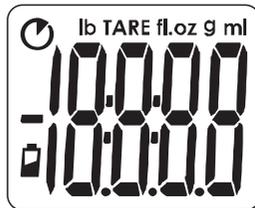

Symbol	Description
	Cooking count down timer
-	Negative weight
TARE	Tare function

3. Key functions

“ON/OFF/TARE” key

- Press the key to turn the display on. The scale will read “0” after displaying “18:8:88”.
- Press the button to use the Tare function, by using the On/Tare key you can add ingredients (e.g. If you are mixing a cake), zeroing after each ingredient is added. This means you can add the precise weights indicated in the recipe.
- Hold the key continuously to power off; please note the scale will turn itself off after 60 seconds of non use.

“MIN/UNIT” key

- Press this button to switch between grams/millilitres/pounds/fluid ounces.

4. Weighing Operation instructions

- Open the battery door at the back of the scale, insert the batteries and replace cover
- Place scale on a firm, flat surface to use. A kitchen bench is ideal
- If using a bowl place onto the scale before switching on.

- Press the unit key to select the desired measure unit
- For the most accurate weight ensure the item is in the middle of the platform
- If measuring multiple items use the Tare function between each new ingredient.
- if the screen reads “EEEE” the scale is overloaded, please remove the weight and reset the scale to zero by turning off and on again.
- A negative weight will appear if the weight is removed when using Tare function.

5. Timer Operation Instructions

- Press the on/off key to turn on the scale
- Press the reset key to switch to timer mode
- Use min/unit key to set minutes and sec key to set seconds
- Press reset key to start and pause the timer
- Timer will store last time set for next time, this can be overridden by repeating the above steps.
- While timer mode is active you can switch to weighing mode by pressing on/offkey and begin to weigh.
- To switch back to timer mode press the reset key

6. Care

- If the screen reads “Lo” the scale will turn off after a few seconds and please replace the batteries.
- Wipe the surface of the scale with a damp cloth and dry before and after each use.
- Do not immerse in water and do not use any detergents
- Do not leave the scale in a damp environment
- The scale is for domestic use only and is not legal for trade.
- If the scale is not being used for a long period, please remove the batteries.