

STT-864
Digital Kitchen Scale



STT-864 Digital Kitchen Scale



SPECIFICATIONS

- * Equipped with 4 high precision Sensors
- * Weight Units: g, fl.oz., lb: oz, ml
- * Capacity: 5250g, 185.2fl.oz., 11lb 9.2oz, 5250ml
- * Graduation: 1g, 0.1fl.oz, 0.1oz, 1ml
- * Power Supply: 2 x CR2032 Lithium batteries

TO CHANGE THE BATTERY

- 1) Ensure +/- terminals are correctly oriented.
- 2) Please use a small tool to help remove the battery from the battery compartment if necessary.



- * Please remove the insulating strip before using.

TO TURN ON

Press the ON/OFF button

TO TURN OFF

Press and hold the ON/OFF button for two seconds to turn off the scale

SELECT WEIGHT UNITS

The UNIT button is located on the underside of the scale. Press the UNIT button repeatedly until the unit of measure you desire appears on the screen.



OPERATING INSTRUCTIONS

1. Place the scale on a flat surface

- * Press ON/OFF to turn on the scale
- * Press ON/OFF for two seconds to turn off the scale
- * Select unit: Press the UNIT button until your unit of measure appears
- * Now place item(s) on the weighing platform
- * The weight will be displayed on the LCD screen

2. Tare function:

When the weight is less than 50g:

Press the TARE button, after 2 seconds, the LCD will display 0g.

When the weight is more than 50g:

Press the TARE button, after 2 seconds the LCD will display 0g and “TARE” at the bottom left corner. Please note that when “TARE” is displayed on the screen, the maximum weight capacity of the scale will be reduced by the weight of the item being tared.

See Fig TARE



Fig TARE

* Overload: The maximum weight capacity of this scale is 5250g. If the weighed item exceeds 5250g, the display will show an overweight error as shown in Fig 1.



Fig 1