

# ELECTRONIC KITCHEN SCALES

## Instructions

The SuperStim Electronic Kitchen scale, at only 10mm, is one of the slimmest scales on the market to date. It has a hygienic and easy to clean glass platform and comes with a large LCD display.

### BATTERIES

1 x CR2032. Remove battery cover. Insert battery ensuring the +/- terminals are the correct way round. Replace cover. Remove isolator tab before first use.

### TO SWITCH ON

- 1) If using, place bowl on scale before switching on.
- 2) Lightly tap **ON ZERO** until 8888 appears on display.
- 3) Wait until display shows 0.

### TO MEASURE LIQUIDS AND SOLIDS

To switch between units lightly tap **g/oz** to scroll through until the desired unit is reached. The Aquatronic liquid measure feature is suitable for all water based liquids, including wine, milk, stock, cream etc.

Note: Oils have a lower specific gravity, which will result in a volume reading of approx +10%.

If measuring oils by volume on this scale, please adjust for this accordingly.

### TO ADD AND WEIGH

To weigh several different ingredients in one bowl, lightly tap **ON ZERO** and wait for the display to reset to zero between each ingredient.

### AUTO SWITCH OFF

Auto switch-off occurs if display shows 0 for 1 minute or shows the same weight reading for 3 minutes.

### MANUAL SWITCH OFF

To maximise battery life touch **ON ZERO** and hold until display switches off (approx 3 secs).

### WARNING INDICATORS

Lo

Replace batteries

EEEE

Weight Overload

### CLEANING AND CARE

- Clean the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
- All plastic parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavoured/coloured foods. Avoid contact with acids such as citrus juices.

### WEEE EXPLANATION



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

### BATTERY DIRECTIVE



This symbol indicates that batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please dispose of batteries in designated collection points.