

Electronic Bathroom Scale Instruction

Your new electronic personal scale has been designed to accurately indicate your weight gain or loss over a period of time, and should give many years of service under normal use .

SPECIFICATIONS

- Equipped with a high precision strain gauge sensor system
- Capacity: 396 lb/ 180 kg
- Division: 0.2 lb/ 0.1 kg
- Automatic zero resetting / switch off
- Unit switch: kg / lb
- Low battery / over-load indicator
- Newly improved Auto Step-On Technology (no need to foot-tap activation before stepping -on)

POWER SUPPLY


- Locate the battery cover on the underside of the scale and insert 4 pieces of AAA Alkaline batteries.
- When the LED indicate "Lo", open the battery door and replace with new batteries.

A small rectangular LED display showing the text "Lo" in a simple font.

OPERATION

STEP1: This scale must be operated on flat & solid floor for accurate results. Do not use it on carpet or rugs.

STEP2: Step on the scale evenly without moving, the scale will automatically display accurate weight in KG, LB instantly. (No need to foot-tap to turn on the scale).

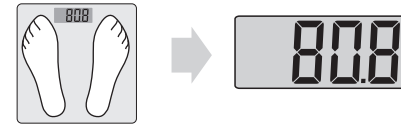


AUTOMATIC SWITCH OFF

The scale will be switched off automatically after 6 seconds of idle time.

UNIT SWITCH

The scale by default is set to Kg. Please press the switch button on the back of scale to switch to Lb .

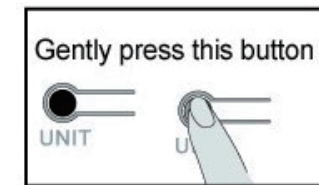

OVER-LOAD INDICATOR

When the scale is over 180 kgs, the "Err" will be displayed.

A small rectangular LED display showing the text "Err" in a simple font.

ADVICE FOR USE AND CARE

- Place your scale on a solid & flat surface will ensure accuracy of your scale.
- Always weigh & place your scale on a same spot.
- Do not let water get into the scale, as it will damage the electronics
- Do not use this scale for legal trade
- Treat the scale with care, as it is a precision instrument. Do not drop or jump on the scale to avoid damaging the sensor
- Remove batteries if not in use for three months or longer