


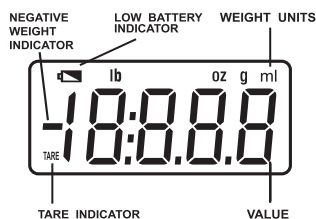
Digital Body Fat Scale

STT-865

Specifications

Capacity	11 lb / 5 Kg
Accuracy	1g, 0.1oz, 0.1oz, 1 ml
Weight units	g, ml, fl:oz, lb:oz
Auto shut off	After 1 minute of no activity
Low battery indicator	
Operation temperature	5°C - 40°C
Battery Type	1 CR2032 lithium battery

Display



Before Use

- Turn the scale upside down and locate the battery compartment.
- Remove insulation strip by pulling it out.

Batteries

- Scale uses 1 CR2032 Battery
- Make sure the + and - sides of the battery are aligned correctly.
- Replace battery when the low battery indicator is visible.

Taking Measurements

- Scale must be on a flat surface for accurate readings.
- Press the “On-Off-Zero” button once to turn the unit on.

- When the LCD display shows a 0 weight it is ready for use.

weight to the scale and the weight without the bowl/ plate will be shown.

Weight Units

- To change measuring units, press the Unit button until the correct one is selected.
- You can choose grams (g), pounds (lb:oz), Fluid Ounce (fl:oz) and milliliters (ml).
- The milliliters measurement is for weighing water only, which requires a bowl.
- Place bowl on scale, wait for the 0 unit measurement, then add water.

Tare Function

- With the unit turned on and a weight of 0 on the LCD, place an bowl or plate on the scale.
- Then press the “On-Off-Unit” button once to set the weight back to 0 units.
- Now you can add more

Overload

- Never place objects exceeding 5 kilos / liters on the scale, this can damage the unit.
- In the case of weight exceeding this limit, the LCD will indicate “EEEE”.

Turning Off Scale

- The scale will automatically turn off after 1 minute of no use.
- To turn off manually, Press and Hold the “On-Off-Zero” button.

Cleaning the Scale

- Use a soft damp cloth to wipe the surface of the scale. Then dry with a soft cloth.
- Do not immerse the scale into water or any other liquid.